#### NOTICE

A Standard SIM Card needed, support GSM / WCDMA;



- Data & Call ID of Sim Card must be opened;
  Traffic, SMS, Calls and other SIM card service fee charged by operators;
- Positioning / Remote command fucntion rely on network of base station.
   Device may not work well if network signal is not very good;
- 4 Product should stay away from fire, high temperature, heat and other extreme environments:
- S Product should not be long time soaked or rinsed in water;

#### INTRODUCTION





#### **FUNCTION**

Short Press to Open/Close LED Press >3s to send SOS Alarm



#### POWER

Press >3s to power on Press >3s to power off



GPS (GPS Satellite signal, Blue)
Quick flash: Searching for GPS
Satellite signals (Not positioned);
Slow flash: Found GPS signals;
( Positioned by GPS)
Blue LED Long light after charging.



GSM/WCDMA LED ( LBS / Base signal, Red ) Quick flash: Searching for base signals ( Not connect yet);

Slow flash: Found base signals; (Base Connected and LBS start) Red LED Long light when charging.

### Function/Parameter

- GSM / WCDMA dual-mode 7-frequency, universal in the world
- GPS/LBS (Satellite/Base) Double Positioning with A-GPS
- 1800mAh lithium battery, low battery alarm
- High-light LED used as a flashlight
- Real-time tracking on Platform & APP, playback track in 90 days
- One Key SOS, GEO-Fence, Speed Alarm
- IP65 waterproof

GPS Positioning Accuracy	5-15m (Depend GPS Signal)
LBS Positioning Accuracy	About 200m (Depend Bases Density)
GPS Frequency	1575 MHz
GSM Frequency	850/900/1800/1900 MHz
WCDMA Frequency	W850/W1900/W2100 MHz
Hot/Warm/Cold Start Time	<3s , <15s , <60s
Battery Capacity	1800 mAh
Dimensions (mm)	79.3(L)X51.9(W)X17.6(H)
Temperature / Humidity	-20°C~65°C / 20%~80%RH
Weight	70 g

#### **Q & A**

#### Q: Positioned by GPS / LBS?

A: GPS called "Global Positioning System", GPS device can be positioned by GPS satellite outdoor, it's precise positioning. Device also can be positioned by base stations of operator which call LBS, mainly for assistance positioning.

#### O: Location is not accurate?

A : If need accurate positioning, use device outdoor where GPS signal is good and start GPS tracking mode.

Device indoor mainly positioned by LBS, the accuracy lower than GPS

#### Q: Standby time can be longer?

A: Device need Internet connection. Standby time will be different by different using environment and working mode.

#### O: Device offline?

- A: The conditions below results in offline.
  - ① No balance or No SIM ② No GSM or GSM signal is weak ③ Battery runs out

#### Attention for more services:







Find Me On Whatsapp

# e<sup>2</sup>Link wcdma gps tracker

### **EELINK Communication Technology CO.LTD**

Address: 3 Floor, Yuyang Mansion, Gaoxin North 4th Rd, Keji North 2th Street, High Tech Park, Nanshan District, Shenzhen, Guangdong, CHINA

TEL: 0755-81482396

Mail: Apple@eelinktech.com

## 1 Insert SIM, Power on, Check LED

- Open USB plug and insert SIM to device, notice direction.
   To remove SIM card, Push SIM Card and it will pop out.
- Insert SIM when device is power off.



- Power on outdoor for positioning, if Red & Blue LED are slowly flashing, device works well.
- Make sure UBS plug is completely plugged, otherwise it will affect waterproof performance.
  - >>> Begin experience of Keelin product

# 2 Install KEELIN APP, Activate Device

Scan OR below to download Keelin APP





Launch APP , Scan QR on Label to register & activate device



>>> Begin experience of Keelin APP

# **3G Portable Tracker**



GPT06-3G Quick Start Guide

